



**BURG
WÄCHTER**

SecuTronic



Electronic
combination lock



TRSE 12H
en Operating instructions

BURG-WÄCHTER KG
Altenhofer Weg 15
58300 Wetter
Germany

BA SecuTronic mdu/hbg/mkd 17032020

Language

en	English	2
de	Download : www.burg.biz	
fr	Download : www.burg.biz	
nl	Download : www.burg.biz	
it	Download : www.burg.biz	
cs	Stáhnout: www.burg.biz	
sk	Download : www.burg.biz	
hu	Letölthető: www.burg.biz	
ro	Descărcare: www.burg.biz	
pt	Download : www.burg.biz	
dk	Download : www.burg.biz	
fi	Ladattava tiedosto: www.burg.biz	
no	Download : www.burg.biz	
sv	Download : www.burg.biz	
pl	Pobieranie pliku: www.burg.biz	
sl	Download : www.burg.biz	
es	Descarga: www.burg.biz	
bg	Download (зареди): www.burg.biz	
hr	Download : www.burg.biz	
ru	загрузка: www.burg.biz	
el	λήψη: www.burg.biz	
et	Download : www.burg.biz	
lv	Download : www.burg.biz	
tr	İndir: www.burg.biz	
lt	Download : www.burg.biz	

www.burg.biz

Dear customer,


Thank you for choosing a safe from BURG-WÄCHTER Elektronik SecuTronic. These locks are certified according to ECB•S Class A. You have purchased a product that meets extremely high safety requirements and was developed and produced according to current technical standards. This lock is certified according to EN 1300: 2018. (Classification of high-security locks according to their resistance to unauthorised opening).

Important: Please read the entire instruction manual before programming and keep this manual safe so that you can look it up at any time.

We hope you enjoy your new BURG-WÄCHTER safe.
Your Burg-Wächter KG

General information

Activation

The electronics are switched on using the button  on the keyboard. At the same time, the display shows the BURG-WÄCHTER logo for a moment before the input mask for the pin code appears.

Languages

The menu navigation in the display is available in twelve languages and can be set via the menu item Languages. For detailed information, please refer to chapter "Sprache/Language Menu".

Blocking times

To protect against tampering, the lock electronics block access to the safe for five minutes if an incorrect number code has been entered three times in succession. Then, for every further incorrect entry, for ten minutes. During this blocking time, the remaining time on the display runs backwards. It is not possible to open the safe during this time, even with a valid user or administrator code.

Increasing burglary protection

Please take care that your pin and administrator codes do not fall into the wrong hands. Therefore, please store your codes in a safe location so that these can only be accessed by authorised persons. In case you lose a code, the lock must be converted to a new code.

- The factory code must be changed as soon as the lock is commissioned.
- Codes that are easy to guess (e.g. 1, -2, -3, -4, -5, -6) must not be used.
- Personal data (e.g. birthdays) or other data that may be concluded with knowledge of the code owner must not be used as a code.
- After changing the code, the lock must be checked several times with the safety door opened.

Attention: All changes to the administrator code, the factory code and the user code must be carried out with the secure storage unit door open! After the locking system has been changed to a new code, it must be operated several times with the new code when the door is open.

Input options

Number keys:

The numbers "1" – "0" are used for input e.g. when entering the code.

1 .,-+	2 abc	3 def	4 ghi	5 jkl
6 mno	7 pqrs	8 tuv	9 wxyz	0 ---:
Func		On Enter		

"Func" key:

The "Func" key adapts its function to the situation. Either you change to the previous menu level by pressing the key or you remove an entered character and you can also change to the main menu. The display shows the current function of the key.


 







"On/Enter" key:

 
The "On/Enter" button starts the system or selects the current menu item.

Keys "1" and "2":

If there are several options, you can scroll up and down using these keys. If this is possible, the display shows this with the corresponding arrows.


Display


- A  Specifies whether you can use the "Func" key to cancel the last entry () or switch to the main menu (.
- B  (2: ) appears when you can scroll down using the "2" key.
- C  (1: ) appears when you can scroll up using the "1" key.
- D  indicates the battery level.
- E  indicates whether the lock has released the lock and the safe can thus be opened.

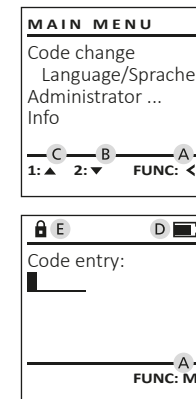

Opening

 Opening with PIN code

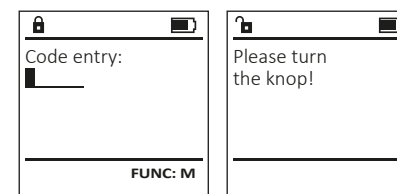

- Switch on the lock using the key .
- Enter the 6-digit PIN code (factory setting "1-2-3-4-5-6").
- "Please turn the rotary knob" appears in the display!
- Turn the knob.

Menu structure

Setting up the menu structure

- Code change
- Language
- Administrator
 - > User
 - > Create
 - > Delete
 - > Reorganise
 - > Processes
 - > Register
- Info
 - > System info
 - > System check

Description of the menu functions

Code Change menu


Changing the administrator code as well as the user code.

We would like to point out that, for security reasons, the factory-set administrator code must be changed to an individually set code.



- Switch on the lock using the key On
Enter.
- Then press Func.
- "Main menu" appears.
- Confirm with On
Enter.
- You can use the keys 1 or 2 to scroll until the administrator/user is marked whose code is supposed to be changed.
- Confirm with On
Enter.
- Enter the old or factory code that was previously valid using the keyboard and press On
Enter.
- Enter the new code using the keyboard and confirm with On
Enter.
- Repeat your entry and confirm it again with On
Enter.
- "Code change accomplished" is displayed after a correct entry.
- Press any key.

MAIN MENU
Code change
Language/Sprache
Administrator ...
Info

2: ▼ FUNC: <

 New Code:
█

FUNC: M

 
Code change
completed!

FUNC: <

Note: When a safe lock is first started up, additional information on the current date and time are requested:

- Enter the day (2 digits)
- Enter the month (2 digits)
- Enter the year (2 digits)
- Enter the hour (2 digits)
- Enter the minutes (2 digits)

Language menu

- Switch on the lock using the key On
Enter.
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Language" menu item is highlighted.
- Confirm with On
Enter.
- "Main menu"/language" appears.
- Use keys 1 or 2 to scroll until the desired language is marked.
- Confirm with On
Enter.
- "Data has been saved!" appears on the display
- Press any key.

MAIN MENU
Code change
Language/Sprache
Administrator ...
Info

1: ▲ 2: ▼ FUNC: <

LANGUAGE
Čeština
Deutsch
English
Español

1: ▲ 2: ▼ FUNC: <

Administrator menu

This menu has several sub-menus to group functions. The functions within this section can only be fully used with the administrator code.

MAIN MENU
Code change
Language/Sprache
Administrator ...
Info

1: ▲ 2: ▼ FUNC: <

Menu Administrator/User

Menu Administrator/User/Create


The created user can open the safe.

Sub-menu Administrator/User/Create



- Switch on the lock using the key On
Enter.
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On
Enter.
- "Main menu"/Administrator" appears.
- Confirm with On
Enter.
- "Main menu"/Administrator/User" appears.
- Confirm with On
Enter.
- Enter the administrator code to acquire the authorisation for programming.
- The next free memory cell is displayed (e.g. USER.0001 CD).
- Enter the 6-digit code and confirm it with On
Enter.
- Save with On
Enter.

USER
Create
Delete

2: ▼ FUNC: <

 USER.0001 CD
█

FUNC: M

 
USER.0001 CD
Created!

FUNC: <

Menu Administrator/User/Delete

Deleted users no longer have access to the safe. However, these will remain in the history.

Sub-menu Administrator/User/Delete

- Switch on the lock using the key On_{Enter} .
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On_{Enter} .
- "Main menu/Administrator" appears.
- Confirm with On_{Enter} .
- "Main menu/Administrator/User" appears.
- Confirm with On_{Enter} .
- "Main menu/Administrator/User/Create" appears.
- Scroll with the 1 or 2 key until the "Delete" menu item is highlighted.
- Confirm with On_{Enter} .
- Enter the administrator code to acquire the authorisation for programming.
- You can use the keys 1 or 2 to scroll until the user is marked whose code is supposed to be deleted.
- Confirm with On_{Enter} .
- "Data has been deleted" appears.
- Press any key.

USER		
Create Delete		
1: ▲		FUNC: <

USER.0001 CD		
1: ▲	2: ▼	FUNC: M

Dataset has been deleted!		
FUNC: <		

Menu Administrator/Reorganise

- Switch on the lock using the key On_{Enter} .
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On_{Enter} .
- "Main menu/Administrator" appears.
- Scroll with the 1 or 2 key until the "Reorganise" menu item is highlighted.
- Confirm with On_{Enter} .
- Enter the administrator code to acquire the authorisation for programming.
- "Reorganisation is running" appears.

ADMIN		
User Restructure Processes Install		
1: ▲	2: ▼	FUNC: <

Restructuring in progress!		

Menu Administrator/Processes

The opening or closing history of the safe can be shown on the display under Processes.

- Switch on the lock using the key On_{Enter} .
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On_{Enter} .
- "Main menu/Administrator" appears.
- Scroll with the 1 or 2 key until the "Processes" menu item is highlighted.
- Confirm with On_{Enter} .
- Scroll with the 1 or 2 key through the data records.
- Confirm with On_{Enter} .

ADMIN		
User Restructure Processes Install		
1: ▲	2: ▼	FUNC: <

Administrator		
Code entry		
1: ▲	2: ▼	FUNC: M

Menu Administrator/Register

In the event of a complete system failure, the electronic control panel may have to be registered again with the locking mechanism.

- Switch on the lock using the key On_{Enter} .
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Administrator" menu item is highlighted.
- Confirm with On_{Enter} .
- "Main menu/Administrator" appears.
- Scroll with the 1 or 2 key until the "Register" menu item is highlighted.
- Confirm with On_{Enter} .
- Enter the administrator code to acquire the authorisation for programming.
- "Data has been saved!" appears.
- Press any key.

ADMIN		
User Restructure Processes Install		
1: ▲		FUNC: <

Dataset has been stored		
FUNC: <		

Info menu

In this menu, you can view several system information reports.

MAIN MENU		
Code change Language/Sprache Administrator ... Info		
1: ▲		FUNC: <

Menu info/System info

- Switch on the lock using the key On_{Enter} .
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Info" menu item is highlighted.
- Confirm with On_{Enter} .
- "Main menu/Info" appears.
- Confirm with On_{Enter} .
- Confirm with On_{Enter} to get detailed information about the system after entering the administrator code with administrator rights.
- The system information is displayed.
- Scroll with button 1 or 2 to view the information.
- Use the button Func. to return.

INFO		
System info Systemcheck		
2: ▼		
FUNC: <		

Info EE-V1.0 SNE:20.0A.00.00		
2: ▼		
FUNC: M		

Info/system check menu


- Switch on the lock using the key On_{Enter} .
- Then press Func.
- "Main menu" appears.
- Scroll with the 1 or 2 key until the "Info" menu item is highlighted.
- Confirm with On_{Enter} .
- "Main menu/Info" appears.
- Scroll with the 1 or 2 key until the "System check" menu item is highlighted.
- Confirm with On_{Enter} .
- Confirm with On_{Enter} to get detailed information about the system after entering the administrator code with administrator rights.
- The system check information is displayed.
- Scroll with button 1 or 2 to view the information.
- Use the button Func. to return.

INFO		
System info Systemcheck		
1: ▲	2: ▼	FUNC: <


EE ✓ ADC 5.45V ✓ Flash ✓ Touch con.		
2: ▼		
FUNC: M		

Battery replacement

 
You can see the battery status at any time using the battery level indicator at the top right of the display. If the battery capacity is running low, a corresponding message appears on the display: When this notice appears, change the batteries as soon as possible.

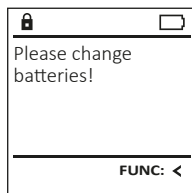

 Remove the two screws on the underside of the lock electronics.

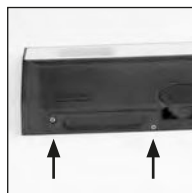

 
Let the lid slide out together with the batteries.

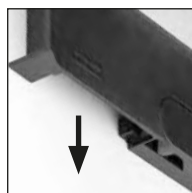

Remove the old batteries and dispose of them according to the disposal instructions. Replace the batteries with four new 1.5 V AA Mignon batteries and according to the correct polarity. For this purpose, illustrations are shown on the battery holder. Please use branded batteries and no rechargeable batteries.



 Push the lid and batteries back into the locking electronics and screw them tight.

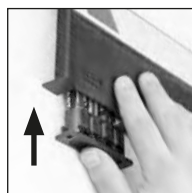

Technical details

Number of administrator codes:	1
Number of user codes:	1 (max.)
Blocking times:	After an incorrect code is entered 3x, 5 minutes, thereafter always 10 minutes
Power supply:	4x AA MIGNON LR6 ALKALINE
Date/time:	-
Updatable (firmware):	-
History number:	500

Warranty

BURG-WÄCHTER products comply with the technical standards in force at the time of production and adhere to our own quality standards. The guarantee only covers defects which can be proved to have resulted from production or material defects at the time of purchase. The warranty ends after two years, further claims are excluded. Defects and damage caused by e.g. transport, incorrect operation, improper use, wear etc. are excluded from the warranty. The batteries are not included in the guarantee. A short description of any defects identified must be made in writing and the device returned to the place it was bought, together with the original packaging. After the device has been tested, and within a appropriate period of time, the guarantor will decide whether or not to repair or exchange the item.

Attention:

In order to deliver a flawless and high quality product to you and to better assist you in case of service or repair, it is necessary that faulty or defective devices along with the valid administrator code be presented to your dealer together with the original documentation.

For returns, all undamaged device parts must furthermore be in the factory setting due to your right of revocation. Failure to comply with this will invalidate the warranty.

Disposal of the device

Dear customer,
Please help us avoid unnecessary waste. Should you intend to dispose of this device at any time, please remember that many components of this device contain valuable materials that can be recycled.



Please be aware that electrical and electronic equipment and batteries marked in this way must not be disposed of with household waste but collected separately. Please obtain information on the collecting points for electrical waste from the responsible authority of your city/municipality.



 
BURG-WÄCHTER KG hereby declares that this device complies with the Directives 2014/30/EU, (EMC) and 2011/65/EU (RoHS).

The complete text of the EU Declaration of Conformity is available at the following Internet address: www.burg.biz

Safety recommendation

Please clean the keyboard operating surface periodically with a microfibre cloth (e.g. glasses cleaning cloth for spectacles) to remove any fingerprints on the keyboard surface.

Structure

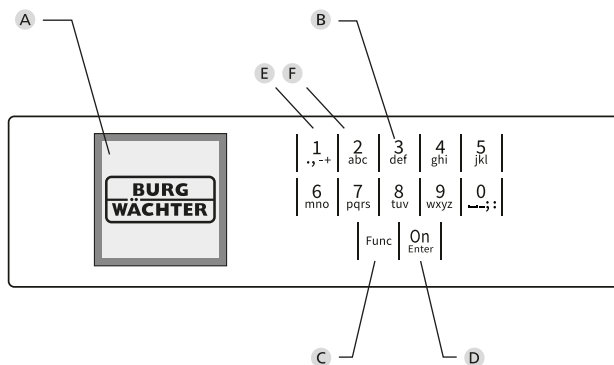

Figure

- A Display**
- B Number keys**
The numbers "1" – "0" are used for input e.g. when entering the code.
- C "Func" key**
The "Func" key adapts its function to the situation. Either you change to the previous menu level by pressing the key or you remove an entered character or you change to the main menu. The display shows the current function of the key (see section 3).
- D "On/Enter" key**
The "On/Enter" key starts the system or selects the current menu item.
- E "1" key**
If there are several options, you can scroll up using the key. If this is possible, the display shows this (see section 3).
- F "2" key**
If there are several options, you can scroll down using the key. If this is possible, the display shows this (see section 3).